



APPLICATION GUIDE

SILICON RUBBER



Perfection and style become creative art


Ease of use, ease of implementation, excellent accuracy of the details. It combines simplicity of use to high production capacity of very complex shapes.



POZZIINDUSTRIES
MADE IN ITALY

OPERATING INSTRUCTIONS

1

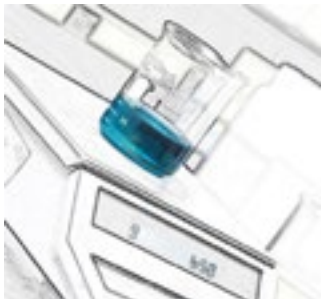

WEIGHING



Weigh separately Silicon Rubber and Catalyst at ratio of 5%.

2




MIXING



Mix two components with a drill or a spatula, be careful not to create air bubbles, until a good homogenization is obtained (in any case at least 5 min). **Let** the mixture rest for 3 min before pouring into the box frame.

3

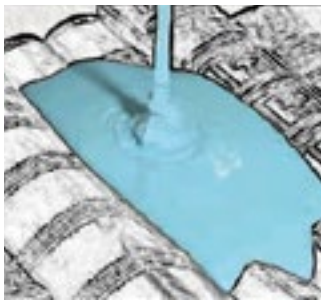


POURING



Pour carefully the mixture into the box frame with the model inside being careful not to create air bubbles, until the model is completely covered.

4

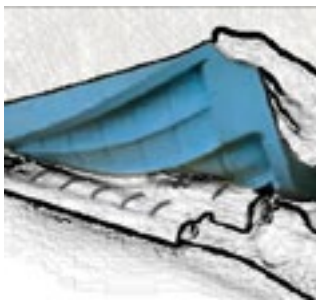

DEMOLDING



24 hours later your silicon rubber mould **is ready** for use!